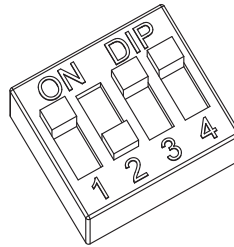


DESCRIPTION

Once the connections are made as in the drawing, the control unit is already operational via wire with the pre-set functions and default settings.

DEFAULT DIP-SWITCHES POSITION

To have the default functioning the dip must be set to ON, OFF, ON, ON

**USE VIA WIRE**

The function of the key is pre-set.
Button 1 = On Off

DEFAULT PARAMETERS

The control unit has pre-set parameters for standard operation.

- functioning mode: bistable (On/Off)
- timer: none
- type of connected device: button

These settings can be customised,
see the full manual.

USE VIA RADIO

To be able to use a transmitter an association must first be made, see procedure on the back

RADIO PROGRAMMING

This procedure lets you programme compatible multifunctional or generic transmitters.

WHICH REMOTE CONTROL DO YOU WANT TO ASSOCIATE WITH THE CONTROL UNIT?



MULTIFUNCTIONAL TRANSMITTERS

CODES:

HB70-SLCT, HB70-SPCT,
HB80-1C, HB80-1DIM, HB80-2L, HB80-30D, HB80-30RGBW, HB80-4C, HB80-4DIM, HB80-4L,
HB90-6LT,
ROUND-1SP,
SENSA-M, SENSA-P, SENSA-R35M, SENSA-R35P, SENSA-R35T, SENSA-T,
TOUCH-1, TOUCH-1CCT, TOUCH-1DIM, TOUCH-1SP, TOUCH-1L , TOUCH-1RGBW, TOUCH-3C, TOUCH-4DIM, TOUCH-CFU

With multifunctional transmitters the transmitter control modes depend on the model used.
Refer to the transmitter manual, to the paragraph entitled "commands sent by the transmitter",
bearing in mind that:
Output set as bistable (DIP 1=ON and DIP2=OFF)= on/off device



GENERIC TRANSMITTERS (WIRELESS BUS)




CODES:

HB80-6G,
MCU-TX4,
TOUCH-1G, TOUCH-2G, TOUCH-4G, TOUCH-LOCK4, TOUCH-TX2,
ROUND-1G

With generic transmitters, the transmitter's control modes depend on the function associated with the key during the association procedure.

The available function for the key are:

TABLE 5.1 - KEY FUNCTIONS OF THE GENERIC TRANSMITTER

POSITION OF DIP IN "STEP 1b" OF THE PROCEDURE	KEY FUNCTION
 DIP: ON ON ON ON	ON / OFF
 DIP: OFF OFF OFF ON	ON
 DIP: OFF OFF ON OFF	OFF

PROCEDURE


WHICH TRANSMITTER DO YOU WANT TO PROGRAMME?

MULTIFUNCTION TRANSMITTER
(see models and codes
on previous page)

GENERIC TRANSMITTER
(see models and codes
on previous page)

STEP 1a

Position DIPs 1, 2, 3 and 4
to ON-ON-ON-ON

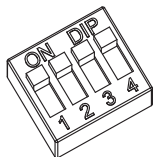

DIP 1, 2, 3 e 4=
ON ON ON ON


STEP 1b

Positions DIPs 1, 2, 3 and 4 according to the
function you want to associate with the remote
control key.
See table 5.1 on the previous page.

STEP 2

Press the button on the receiver for a short time.

The LED comes on and stays on.

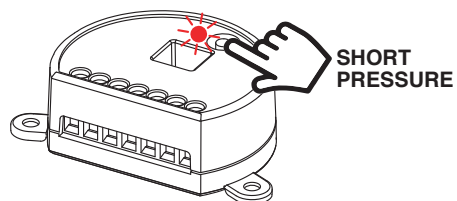


STEP 3

Make a transmission with the transmitter to be saved
(see transmitter manual, paragraph entitled "transmitter
programming").

The LED on the receiver flashes 3 times to signal
that it has been received.



MAKE A TRANSMISSION
WITH THE TRANSMITTER

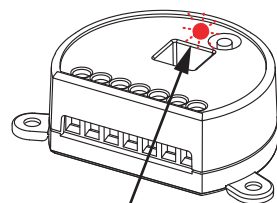


THE LED FLASHES 3 TIMES

STEP 4

The control unit listens for 30 seconds in case you want
to add other transmitters.

To immediately exit the procedure give a short pressure
on the button on the receiver.

The LED turns off

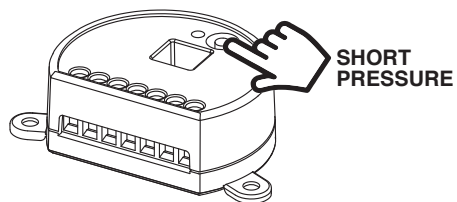


STEP 5

After programming, reposition
the dip switches to the desired
operation of the contacts.

Default:

DIP1= On, Dip2= Off


(Bistable function, On/Off)

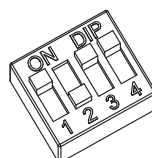

Quick start MCU-L1

*Control unit for single
230V load*

CONNECTION DIAGRAM

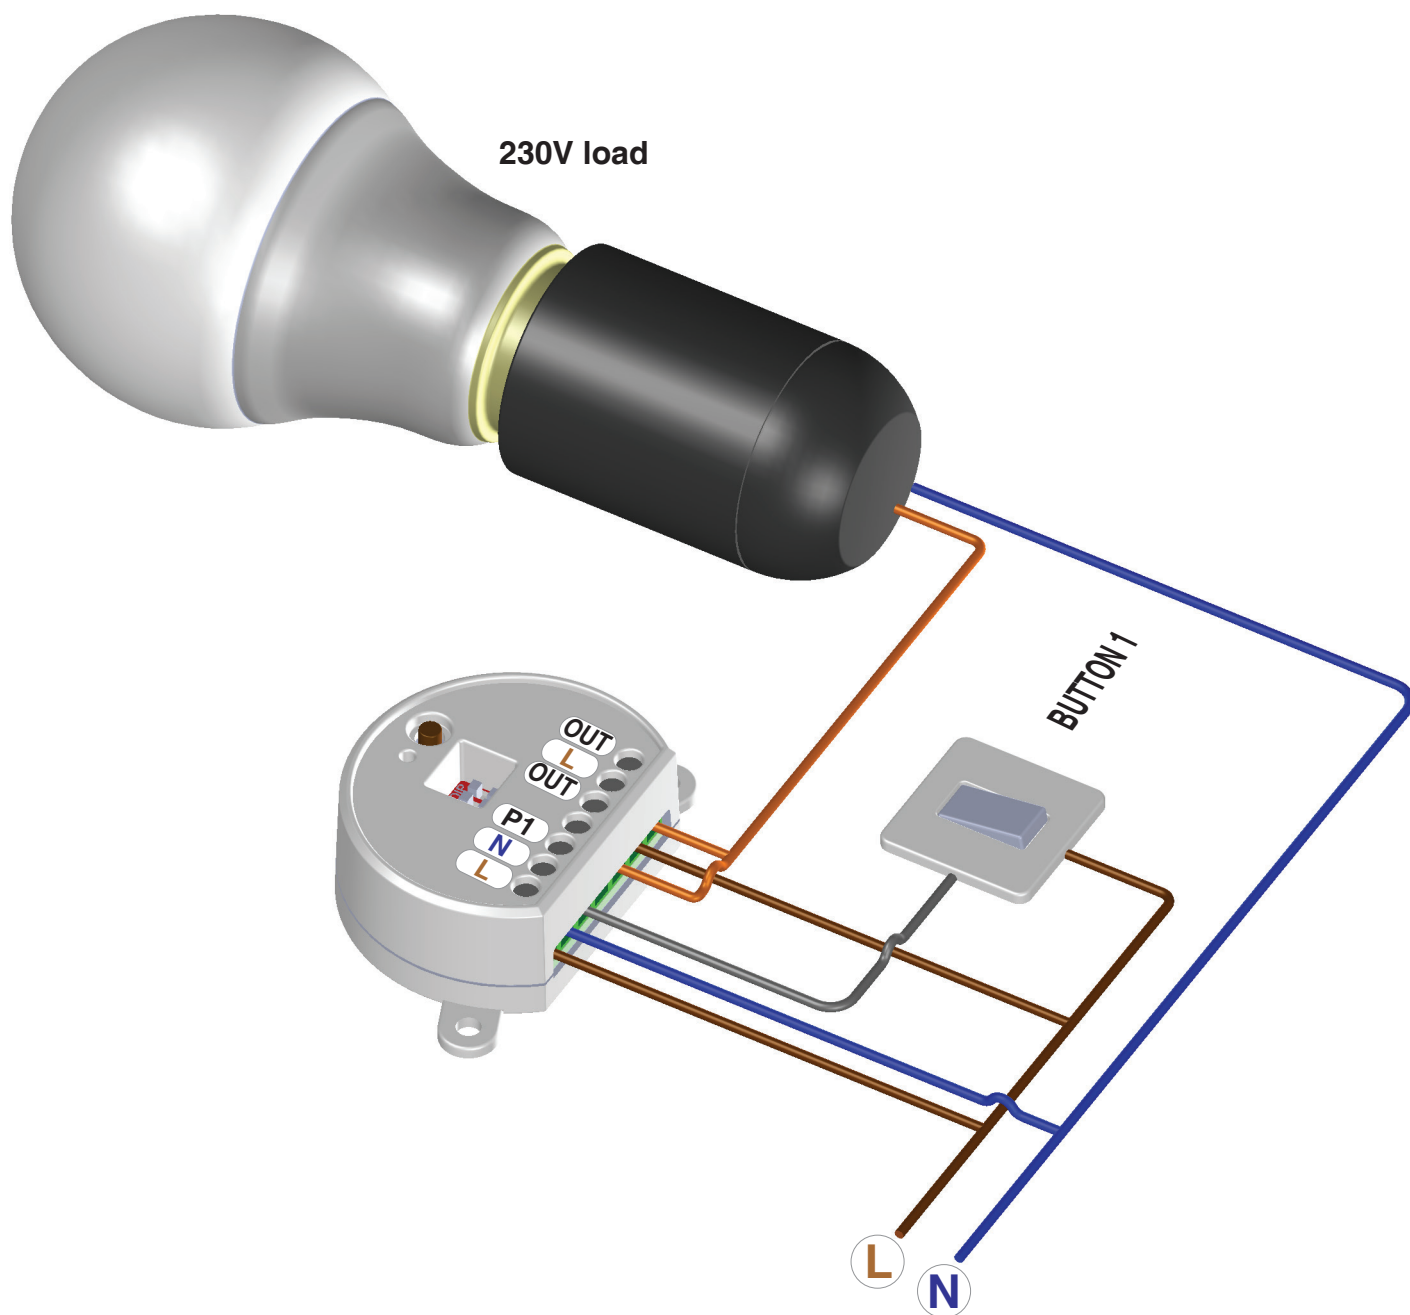

ATTENTION:

See the full manual for the restrictions on use
and full features of the control unit