


## DESCRIPTION

Once the connections are made as in the drawing, the control unit is already operational via wire with the pre-set functions and default settings.

## DEFAULT DIP-SWITCHES POSITION

To have the default functioning the dip must be set to ON, ON, ON, ON

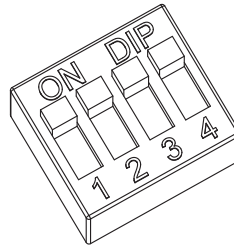

## USE VIA WIRE

The function of the key is pre-set.  
Button 1 = Open / Stop / Close

## DEFAULT PARAMETERS

The control unit has pre-set parameters for standard operation.

- functioning mode: pulse operation (On/Off)
- manoeuvre times: 60s
- type of connected device: button

These settings can be customised, see the full manual.

## USE VIA RADIO

To be able to use a transmitter an association must first be made, see procedure on the back

# RADIO PROGRAMMING

This procedure lets you programme compatible multifunctional or generic transmitters.

## WHICH REMOTE CONTROL DO YOU WANT TO ASSOCIATE WITH THE CONTROL UNIT?

### MULTIFUNCTIONAL TRANSMITTERS

#### CODES:

HB70-SLCT, HB70-SPCT,  
HB80-1C, HB80-1DIM, HB80-2L, HB80-30D, HB80-30RGBW, HB80-4C, HB80-4DIM, HB80-4L,  
HB90-6LT,  
ROUND-1SP,  
SENSA-M, SENSA-P, SENSA-R35M, SENSA-R35P, SENSA-R35T, SENSA-T,  
TOUCH-1, TOUCH-1CCT, TOUCH-1DIM, TOUCH-1SP, TOUCH-1L, TOUCH-1RGBW, TOUCH-3C, TOUCH-4DIM, TOUCH-CFU

With multifunctional transmitters the transmitter control modes depend on the model used. Refer to the transmitter manual, to the paragraph entitled "commands sent by the transmitter", bearing in mind that it is a "up/down/stop" device.

### GENERIC TRANSMITTERS (WIRELESS BUS)





#### CODES:

HB80-6G,  
MCU-TX4,  
TOUCH-1G, TOUCH-2G, TOUCH-4G, TOUCH-LOCK4, TOUCH-TX2,  
ROUND-1G

With generic transmitters, the transmitter's control modes depend on the function associated with the key during the association procedure.

The available function for the key are:

TABLE 5.1 - KEY FUNCTIONS OF THE GENERIC TRANSMITTER

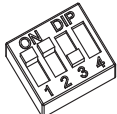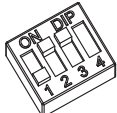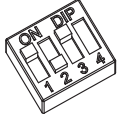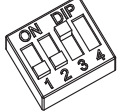POSITION OF DIP IN "STEP 1b" OF THE PROCEDURE	KEY FUNCTION
 DIP : ON ON OFF	UP / STOP / DOWN / STOP
 DIP : OFF ON ON	UP
 DIP : ON OFF ON	DOWN
 DIP : OFF OFF ON	STOP

# PROCEDURE


WHICH TRANSMITTER DO YOU WANT TO PROGRAMME?

**MULTIFUNCTION TRANSMITTER**  
(see models and codes on previous page)

**GENERIC TRANSMITTER**  
(see models and codes on previous page)

## STEP 1a

Position DIPs 1, 2, 3 and 4 to ON-ON-ON-ON

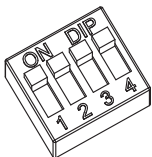

DIP 1, 2, 3 e 4=  
ON ON ON ON


## STEP 1b

Positions DIPs 1, 2, 3 and 4 according to the function you want to associate with the remote control key.  
See table 5.1 on the previous page.

## STEP 2

Press the button on the receiver for a short time.

The LED comes on and stays on.

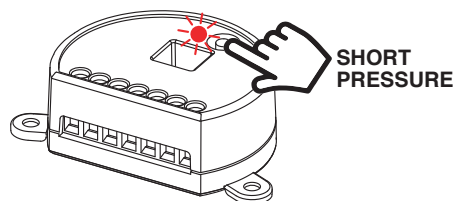


## STEP 3

Make a transmission with the transmitter to be saved (see transmitter manual, paragraph entitled "transmitter programming").

The LED on the receiver flashes 3 times to signal that it has been received.



MAKE A TRANSMISSION WITH THE TRANSMITTER

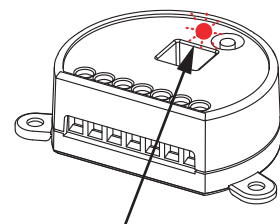

THE LED FLASHES 3 TIMES

## STEP 4

The control unit listens for 30 seconds in case you want to add other transmitters.

To immediately exit the procedure give a short pressure on the button on the receiver.

The LED turns off

